
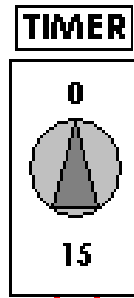



SUB-PANEL

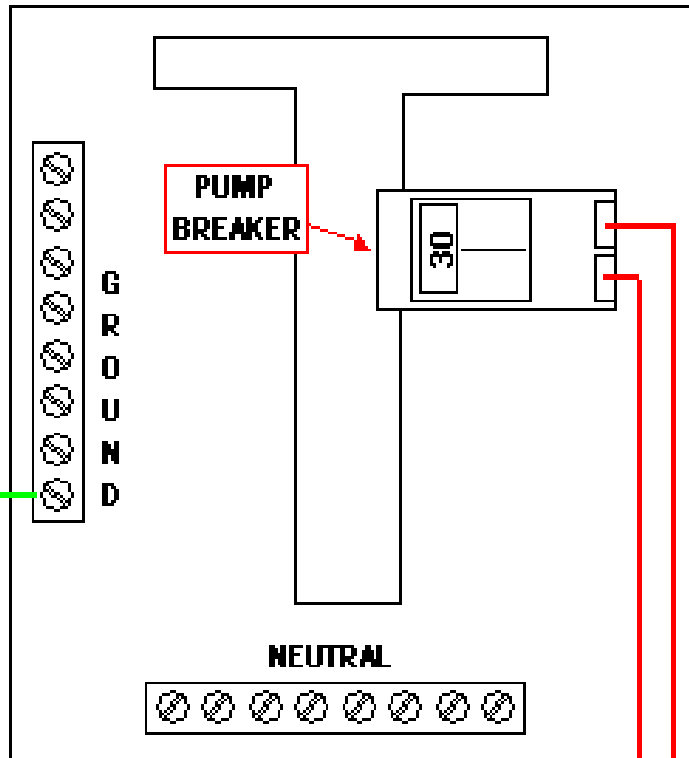

1- REMOVE THE TIMER FROM THE JET PUMP CIRCUIT

THIS ENDS UP BEING WIRED JUST LIKE YOU WOULD WIRE A FILTER PUMP - THE TIMER WILL STILL BE USED, TO REMOTELY CONTROL THE SR500 INSTEAD OF COMPLETING THE CIRCUIT

2- CONNECT TO MAKE THE CIRCUIT COMPLETE

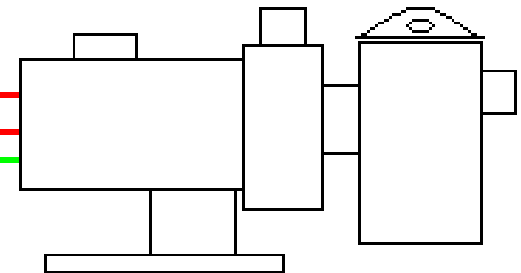

TO REMOTELY CONTROL AN SR500 WITH A TIMER, THE TIMER HAS TO BE WIRED INTO THE SR500'S REMOTE INPUT, AND THE SR500 OPERATED IN REMOTE MODE. THE TIMER WILL BE USED TO OPEN AND CLOSE A DRY CONTACT IN THE SR500 (LABELLED REMOTE SW IN) THIS CIRCUIT WILL MAKE THE SR500 A "SLAVE" OF THE TIMER, IT WILL DO NOTHING UNTIL THE TIMER IS TURNED ON AND CLOSES THE REMOTE SW INPUT