

E-STOP AND REMOTE ALARM WIRING DIAGRAM

CONFIGURE YOUR E-STOP TO SOUND THE REMOTE ALARM AND STOP THE PUMP SIMULTANEOUSLY

